

QTY.	PART NUMBER
1	4NHP-1-01-FIREBOX MANTEL
1	4NHP-1-02-FIREBOX REAR PLATE
1	4NHP-1-03-FIREBOX FRONT PLATE
1	4NHP-1-04-FOUNDATION RING
12	4NHP-1-05-FIREBOX STAY
38	4NHP-1-06-FIREBOX STAY RIVETS 5x21
12	4NHP-1-07-FIREBOX STAY RIVETS 7x22
1	4NHP-1-08-FIREBOX CROWN
1	4NHP-1-09-FIREBOX FIRE DOOR RING
1	4NHP-1-10-BOILER SHELL
1	4NHP-1-11-BOILER BACKHEAD
1	4NHP-1-12-BOILER THROAT PLATE
1	4NHP-1-13-BOILER FRONT PIPE PLATE
12	4NHP-1-14-BOILER FLAME PIPE
1	4NHP-1-15-BOILER INNER STIFFENING PLATE
1	4NHP-1-16-BOILER OUTER SADDLE PLATE
1	4NHP-1-17-BOILER FRONT TANK BRACKET
3	4NHP-1-18-BOILER LONGITUDINAL STAY
6	4NHP-1-19-BOILER LONGITUDINAL STAY END NUT
6	4NHP-1-20-NIPPLE M8x18x13
1	4NHP-1-21-INNER FIRE DOOR SURROUND
1	4NHP-1-22-OUTER FIRE DOOR SURROUND
2	4NHP-1-23-FIRE DOOR HINGE
1	4NHP-1-24-FIRE DOOR LEDGE
1	4NHP-1-25-FIRE DOOR
1	4NHP-1-26-FIRE DOOR PIN
1	4NHP-1-27-FIRE DOOR AIR REGULATOR PLATE
1	4NHP-1-28-FIRE DOOR LEDGE PLATE
1	4NHP-1-29-BLOWDOWN VALVE BODY
1	4NHP-1-30-BLOWDOWN VALVE BALL VALE
1	4NHP-1-31-BLOWDOWN VALVE SPINDLE
1	4NHP-1-32-BLOWDOWN VALVE SPINDLE NUT
2	4NHP-1-33-CHECK VALVE BODY
2	4NHP-1-34-CHECK VALVE BALL VALVE
2	4NHP-1-35-CHECK VALVE TOP SCREW
3	4NHP-1-36-M8x5 PIPE NUT
1	4NHP-1-37-WTR LVL IND BOTTOM HOUSING
1	4NHP-1-38-WTR LVL IND TOP HOUSING
1	4NHP-1-39-WTR LVL IND TOP SCREW
1	4NHP-1-40-WTR LVL IND GLASS TUBE
2	4NHP-1-41-WTR LVL IND GLASS TUBE NUT
1	4NHP-1-42-WTR LVL IND SPINDLE NUT
1	4NHP-1-43-WTR LVL IND SPINDLE
1	4NHP-1-44-WTR LVL IND SPILL PIPE
1	4NHP-1-45-WTR LVL IND SPILL PIE NUT
1	4NHP-1-46-WTR LVL IND TOP EXT CONNETOR
1	4NHP-1-47-WTR LVL IND BOTTOM EXT CONNETO
1	4NHP-1-48-PRESSURE GAUGE PIPE
1	4NHP-1-49-PRESSURE GAUGE
1	4NHP-1-60-PRESSURE GAUGE PIPE NUT
1	4NHP-1-61-M8x3 PIPE NUT
1	4NHP-1-62-GENERAL ON-OFF VALVE BODY
1	4NHP-1-63-GENERAL ON-OFF VALVE SPINDLE
1	4NHP-1-64-GENERAL ON-OFF VALVE SPINDLE NUT
10	4NHP-1-65-GRATE BAR
18	4NHP-1-66-GRATE BAR SPACER
2	4NHP-1-67-GRATE TIE ROD
1	4NHP-1-68-ASH PAN
1	4NHP-1-69-ASH PAN REAR FLAP BRACKET
1	4NHP-1-70-ASH PAN FRONT FLAP
4	4NHP-1-71-ASH PAN PIN HINGE
1	4NHP-1-72-ASH PAN REAR FLAP
2	4NHP-1-73-ASH PAN GRATE REST
1	4NHP-1-74-ASH PAN PIN
1	4NHP-1-77-GENERAL ON-OFF VALVE EXT CONNETOR
QTY.	PART NUMBER
1	4NHP-2-01-SMOKE BOX SHELL
1	4NHP-2-02-SMOKE BOX DOOR MOUTING RING
2	4NHP-2-03-SMOKE BOX MOUTING BRACKET
2	4NHP-2-04-SMOKE BOX DOOR RING HINGE BRACKET
1	4NHP-2-05-SMOKE BOX DOOR RING HINGE PIN
1	4NHP-2-06-SMOKE BOX DOOR
1	4NHP-2-07-SMOKE BOX DOOR PLATE
1	4NHP-2-08-SMOKE BOX DOOR HINGE STRAP
1	4NHP-2-08-SMOKE BOX DOOR HINGE STRAP
1	4NHP-2-09-SMOKE BOX DOOR CENTER BUSH
1	4NHP-2-10-SMOKE BOX DOOR LOCKING BAR
1	4NHP-2-11-SMOKE BOX DOOR LOCKING DART
1	4NHP-2-12-SMOKE BOX DOOR LOCKING DART HANDLE
1	4NHP-2-13-SMOKE BOX DOOR LOCKING DART HANDLE NUT
1	4NHP-2-14-SMOKE STACK BASE RING
1	4NHP-2-15-SMOKE STACK
1	4NHP-2-16-SMOKE STACK CROWN
1	4NHP-2-17-OUTER SADDLE BRACKET
1	4NHP-2-18-INNER SADDLE BRACKET
1	4NHP-2-19-PIVOT AXLE BEARING
1	4NHP-2-20-PIVOT AXLE
1	4NHP-2-21-PIVOT AXLE COLLAR
1	4NHP-2-22-LEAF SPRING
1	4NHP-2-23-LEAF SPRING HOLDING BRACKET
1	4NHP-2-24-PIVOT AXLE PIVOT PIN
1	4NHP-2-25-PIVOT AXLE PIVOT PIN COLLAR
1	4NHP-2-26-PULLING PIN
1	4NHP-2-27-FRONT WHEEL AXLE

QTY.	PART NUMBER
2	4NHP-2-28-FRONT WHEEL AXLE COLLAR
2	4NHP-2-29-FRONT WHEEL HUB
2	4NHP-2-30-FRONT WHEEL INSIDE HUB CLAMPING RING
2	4NHP-2-31-FRONT WHEEL OUTSIDE HUB CLAMPING RING
2	4NHP-2-32-FRONT WHEEL AXLE COVER
2	4NHP-2-33-FRONT WHEEL HUB OIL POT
20	4NHP-2-34-FRONT WHEEL SPOKE
2	4NHP-2-35-FRONT WHEEL RIM
2	4NHP-2-36-FRONT WHEEL OUTER RIM
2	4NHP-2-37-CHAIN BOLT
1	4NHP-2-38-BLOWER ELBOW
1	4NHP-2-39-BLOWER ELBOW LOCK NUT
1	4NHP-2-40-BLOWER BLOW PIPE
1	4NHP-2-41-BLOWER ELBOW NOZZLE
1	4NHP-2-42-BLOWER PIPE
1	4NHP-2-43-BLOWER M8x5 PIPE NUT
1	4NHP-2-44-BLOWER M10 THIN NUT
QTY.	PART NUMBER
1	4NHP-3-01-CYLINDER BLOCK
2	4NHP-3-02-CYLINDER FRONT COVER
2	4NHP-3-03-CYLINDER REAR COVER
2	4NHP-3-04-PISTON ROD GLAND
1	4NHP-3-05-CROSSHEAD GUIDE
1	4NHP-3-05-CROSSHEAD GUIDE
2	4NHP-3-06-VALVE CHEST
2	4NHP-3-07-PORT PLATE
2	4NHP-3-08-VALVE ROD GLAND
1	4NHP-3-09-REGULATOR ROD GLAND
2	4NHP-3-10-VALVE CHEST COVER
1	4NHP-3-11-REGULATOR CHEST COVER
2	4NHP-3-12-VALVE ROD GUIDE BRACKET
2	4NHP-3-13-SAFETY VALVE BODY
2	4NHP-3-14-SAFETY VALVE BALL VALVE
2	4NHP-3-15-SAFETY VALVE STEM
2	4NHP-3-16-SAFETY VALVE SPRING
2	4NHP-3-17-SAFETY VALVE PRESSURE SCREW
2	4NHP-3-18-SAFETY VALVE LOCKING NUT
1	4NHP-3-19-WHISTLE VALVE BODY
1	4NHP-3-20-WHISTLE VALVE BALL VALVE
1	4NHP-3-21-WHISTLE VALVE STEAM INLET
1	4NHP-3-22-WHISTLE VALVE SPRING
1	4NHP-3-23-WHISTLE VALVE STEM SCREW
1	4NHP-3-24-WHISTLE VALVE STEM TUBE
1	4NHP-3-25-WHISTLE VALVE STEM
1	4NHP-3-26-WHISTLE LOWER BELL
1	4NHP-3-27-WHISTLE UPPER BELL
1	4NHP-3-28-WHISTLE OPERATING HANDLE BRACKET
1	4NHP-3-29-WHISTLE OPERATING HANDLE
2	4NHP-3-30-EXHAUST PORT PLUG
2	4NHP-3-31-OIL NON-RETURN VALVE BODY
2	4NHP-3-32-OIL NON-RETURN VALVE BALL VALVE
2	4NHP-3-33-OIL NON-RETURN VALVE TOP SCREW
2	4NHP-3-34-OIL NON-RETURN VALVE SPRING
2	4NHP-3-35-M6x4 PIPPE NUT
1	4NHP-3-36-EXHAUST COUPLING GLAND
1	4NHP-3-37-EXHAUST PIPE
1	4NHP-4-01-LH+RH-SIDE FRAME PLATE
1	4NHP-4-01-LH+RH-SIDE FRAME PLATE
1	4NHP-4-02-REAR BRIDGE PLATE
1	4NHP-4-03-FRONT BRIDGE PLATE
2	4NHP-4-04-IDLER SHAFT BEARING
2	4NHP-4-05-REAR SHAFT BEARING FRAMEWORK
2	4NHP-4-06-MAIN CRANKSHAFT BEARING
1	4NHP-4-07-RR WHL SHAFT BEARING
2	4NHP-4-08-RR WHL SHAFT OILER
2	4NHP-4-09-RR WHL SHAFT SPRING PLATE
2	4NHP-4-10-RR WHL SHAFT SPRING
2	4NHP-4-11-RR WHL SHAFT SPRING CENTER BOLT
4	4NHP-4-12-RR WHL SHAFT TIE BOLT
2	4NHP-4-13-RR WHL SHAFT BOTTOM TIE BOLT PLATE
2	4NHP-4-14-RR WHL SHAFT TOP TIE BOLT PLATE
1	4NHP-4-15-BLR BLY WTR TNK FRONT PLATE
1	4NHP-4-16-BLR BLY WTR TNK REAR PLATE
1	4NHP-4-17-BLR BLY WTR TNK WRAPPER PLATE
2	4NHP-4-18-BLR BLY WTR TNK FRONT STEP
1	4NHP-4-19-BLR BLY WTR TNK BEARING ANGLE-1
1	4NHP-4-20-BLR BLY WTR TNK BEARING ANGLE-2
1	4NHP-4-21-BLR BLY WTR TNK HANGER ANGLE
2	4NHP-4-22-BLR BLY WTR TNK REAR MOUNTING ANGLE
2	4NHP-4-23-BLR BLY WTR TNK MANHOLE COVER
1	4NHP-4-24-BLR BLY WTR TNK STEERING COLUMN BUSH
1	4NHP-4-25-BLR BLY WTR TNK TIE BEAM
1	4NHP-4-25-BLR BLY WTR TNK TIE BEAM
1	4NHP-4-26-BLR BLY WTR TNK VENT BOX
1	4NHP-4-27-BLR BLY WTR TNK HOSE REEL
1	4NHP-4-27-BLR BLY WTR TNK HOSE REEL
1	4NHP-4-28-BLR BLY WTR TNK STEERING ROD BRACKET
1	4NHP-4-29-UPPER STEERING ROD BRACKET
1	4NHP-4-30-STEERING CHAIN SHAFT
1	4NHP-4-31-WORMWHEEL AND SHAFT
1	4NHP-4-32-WORM AND STEERING SHAFT
1	4NHP-4-33-STEERING WHEEL
1	4NHP-4-34-WTR OVERFLOW PIPE NIPPLE
1	4NHP-4-35-OVERFLOW PIPE ELBOW

QTY.	PART NUMBER
1	4NHP-4-36-GEAR WHEEL MOUNTING BRACKET
2	4NHP-4-37-FORK GUIDE SHAFT
1	4NHP-4-38-CONTROL HANDLE SUPPORT BRACKET
1	4NHP-4-39-CONTROL LEVER REST
1	4NHP-4-40-GR WHL SLIDE STOP
1	4NHP-4-41-GR WHL SLIDE STOP HANDLE
1	4NHP-4-42-GR WHL SLIDE STOP PIVOT
1	4NHP-4-43-GR WHL SLIDE STOP PIVOT NUT
1	4NHP-4-44-LARGE GR WHL SLIDE YOKE
1	4NHP-4-45-SMALL GR WHL SLIDE YOKE
1	4NHP-4-46-GEAR SELECTOR HANDLE
1	4NHP-4-47-GEAR SELECTOR PIN
1	4NHP-4-48-GEAR BOX LARGE GEAR WHEEL
1	4NHP-4-49-GEAR BOX SMALL GEAR WHEEL
5	4NHP-4-50-GEAR WHEEL KEY
1	4NHP-4-51-CRANKSHAFT END-1
1	4NHP-4-52-CRANKSHAFT END-2
1	4NHP-4-53-CRANKSHAFT CENTER
4	4NHP-4-54-CRANK WEB PART-1
4	4NHP-4-55-CRANK WEB PART-2
2	4NHP-4-56-CRANK PIN
1	4NHP-4-57-CRANKSHAFT CENTER ECCENTRIC
2	4NHP-4-58-VALVE ECCENTRIC SHEAVE
2	4NHP-4-58-VALVE ECCENTRIC SHEAVE
1	4NHP-4-59-FLYWHEEL
1	4NHP-4-60-FLYWHEEL KEY
1	4NHP-4-61-IDLER SHAFT
1	4NHP-4-62-IDLER SHAFT GEAR WHEEL 50T
1	4NHP-4-63-IDLER SHAFT GEAR WHEEL 57T
1	4NHP-4-64-IDLER SHAFT KEYS
2	4NHP-4-64-IDLER SHAFT KEYS
1	4NHP-4-65-IDLER SHAFT GEAR WHEEL 18T
1	4NHP-4-66-FD PMP CRANKSHAFT GEAR WHEEL
1	4NHP-4-67-FD PMP ECC GR WHL AXLE
1	4NHP-4-68-FD PMP ECCENTRIC GEAR WHEEL
1	4NHP-4-69-FD PMP ECC GEAR WHEEL BEARING
1	4NHP-4-70-FD PMP ECCENTRIC SHEAVE
1	4NHP-4-71-FD PMP ECCENTRIC SPACER
1	4NHP-4-72-FD PMP HOUSING BASE PLATE
1	4NHP-4-73-FD PMP HOUSING
1	4NHP-4-74-FD PMP HOUSING PISTON GLAND
1	4NHP-4-75-FD PMP BALL VALVE-6mm
1	4NHP-4-76-FD PMP BALL VALVE-7.5mm
1	4NHP-4-77-FD PMP HOUSING TOP STOP SCREW
1	4NHP-4-78-FD PMP HOUSING SIDE STOP SCREW
3	4NHP-4-79-FD PMP HOUSING WTR SPLY NIPPLE
3	4NHP-4-80-FD PMP PIPE NUT M8x5
1	4NHP-4-81-FD PMP ECCENTRIC STRAP
1	4NHP-4-82-FD PMP ECCENTRIC STRAP ROD
1	4NHP-4-83-FD PMP PISTON
1	4NHP-4-84-FD PMP WTR PIPE BUSH
1	4NHP-4-85-FD PMP WTR SUPPLY PIPE
1	4NHP-4-86-FD PMP WTR DISCHARGE PIPE
1	4NHP-4-87-PIPE NUT M12x8
1	4NHP-4-88-REAR WHEEL SHAFT
1	4NHP-4-89-DIFF. HOUSING-PART-1
1	4NHP-4-90-DIFF. HOUSING-PART-2
1	4NHP-4-91-WINCH DRUM
2	4NHP-4-92-WINCH DRUM CLAMP RING
1	4NHP-4-93-REAR WHEEL SHAFT GEAR WHEEL 70T
1	4NHP-4-94-DIFF. GEAR WHEEL 30T TYPE-1
1	4NHP-4-95-DIFF. GEAR WHEEL 30T TYPE-2
1	4NHP-4-96-DIFF. GEAR WHEEL 30T TYPE-2 BUSH
1	4NHP-4-97-DIFF. GEAR WHEEL 30T TYPE-2 COVER DISC
6	4NHP-4-98-DIFF. GEAR WHEEL 15T
6	4NHP-4-99-DIFF. GEAR WHEEL 15T BEARING
6	4NHP-4-100-DIFF. GEAR WHEEL 15T AXLE BOLT
2	4NHP-4-101- REAR WHEEL SHAFT KEY 6x6x28
1	4NHP-4-102-REAR WHEEL AXLE SPACER
2	4NHP-4-103-REAR WHEEL HUB
2	4NHP-4-104-REAR WHEEL HUB SPOKE COVER
1	4NHP-4-104-REAR WHEEL HUB SPOKE COVER
4	4NHP-4-105A-REAR WHEEL SPOKE TYPE-1
8	4NHP-4-105A-REAR WHEEL SPOKE TYPE-1
12	4NHP-4-105B-REAR WHEEL SPOKE TYPE-2
1	4NHP-4-106-REAR WHEEL RIM
1	4NHP-4-106-REAR WHEEL RIM
48	4NHP-4-107-REAR WHEEL RIM STREAK
48	4NHP-4-107-REAR WHEEL RIM STREAK
1	4NHP-4-108-REAR WHEEL HUB SPACER
2	4NHP-4-109-REAR WHEEL AXLE END WASHER
1	4NHP-4-110-RH-REAR WHEEL HUB SPOKE INNER COVER
2	4NHP-4-111-REAR WHEEL HUB COVER
2	4NHP-4-112-RH-REAR WHEEL PIN
2	4NHP-4-113-LRH-REAR WHEEL PIN
4	4NHP-4-114-REAR WHEEL PIN LATCH
2	4NHP-4-115-RH-REAR WHEEL AXLE KEY
1	4NHP-4-116-REGULATOR HANDLE MOUNTING PLATE
1	4NHP-4-117-REGULATOR HANDLE PIVOT PIN
1	4NHP-4-118-LH GEAR WHEEL PROTECTOR
1	4NHP-4-119-RH GEAR WHEEL PROTECTOR

QTY.	PART NUMBER
1	4NHP-5-01-RH-WTR CONT. SIDE PLATE
1	4NHP-5-02-LH-WTR CONT. SIDE PLATE
1	4NHP-5-03-WTR CONT WRAPPER PLATE
1	4NHP-5-04-WTR OVERLOW NIPPLE
1	4NHP-5-05-FOOT PLATE FRAME
1	4NHP-5-06-FOOT PLATE
1	4NHP-5-07-BRAKE TUBE
2	4NHP-5-08-BRAKE TUBE OUTER STIFFENING PLATE
2	4NHP-5-09-BRAKE TUBE BEARING
1	4NHP-5-10-WTR CONT. MOUNTING BRACKET
2	4NHP-5-11-SPACER MOUNTING PLATE
1	4NHP-5-12-DRAW BAR
1	4NHP-5-13-COAL BUNKER DOOR PLATE
2	4NHP-5-14-COAL DOOR GUIDE
1	4NHP-5-15-COAL DOOR
1	4NHP-5-16-DRAW BAR PULLING PIN
1	4NHP-5-17-LOWER STEP
1	4NHP-5-18-UPPER STEP
1	4NHP-5-19-OVAL MANHOLE COVER
1	4NHP-5-20-LAMP HOLDING BRACKET
1	4NHP-5-21-CABLE SPOOL MOUNTING BRACKET
2	4NHP-5-22-CABLE SPOOL
2	4NHP-5-23-CABLE SPOOL AXLE
1	4NHP-5-24-LAMP
1	4NHP-5-25-LAMP HOLDER
1	4NHP-5-26-BRAKE SPINDLE BEARING BRACKET
1	4NHP-5-27-BRAKE SPINDLE
2	4NHP-5-28-BRAKE SPINDLE STOP COLLAR
1	4NHP-5-29-BRAKE SHAFT
2	4NHP-5-30-BRAKE SHAFT CRANK
1	4NHP-5-31-BRAKE SHAFT LINK CRANK
1	4NHP-5-32-BRAKE SHAFT LINK CRANK NUT
2	4NHP-5-33-BRAKE PAD
2	4NHP-5-34-BRAKE PAD PIN
1	4NHP-5-35-RH-TRIM-1
1	4NHP-5-36-TRIM-2
2	4NHP-5-37-FWD-REV QUADRANT
2	4NHP-5-38-FWD-REV QUADRANT SPACER-1
1	4NHP-5-39-FWD-REV QUADRANT SPACER-2
1	4NHP-5-40-FWD-REV QUADRANT SPACER-3
1	4NHP-5-41-FWD-REV OPERATOR HANDLE
1	4NHP-5-42-FWD-REV HANDLE LATCH GUIDE BLOCK
1	4NHP-5-43-FWD-REV HANDLE LATCH
1	4NHP-5-44-FWD-REV HANDLE LATCH OPERATOR
1	4NHP-5-45-FWD-REV HANDLE BOTTOM SPACER
1	4NHP-5-46-FWD-REV HANDLE LATCH OPERATOR SPRING
1	4NHP-5-47-OVERFLOW PIPE ELBOW
1	4NHP-5-48-PIPE NUT M12x8
1	4NHP-5-49-OVERFLOW PIPE
1	4NHP-5-50-FWD-REV HANDLE MIDDLE SPACER
QTY.	PART NUMBER
1	4NHP-6-01-STM. SUPL. REG. SLIDE VALVE
1	4NHP-6-02-STM. SUPL. REG. SLIDE VALVE ROD
1	4NHP-6-03-STM. SUPL. REG. SLIDE VALVE NUT
1	4NHP-6-04-STM. SUPL. REG. SLIDE VALVE ROD END
1	4NHP-6-05-STM. SUPL. REG. HANDLE
1	4NHP-6-06-STM. SUPL. REG. REACH ROD
1	4NHP-6-07-STM. SUPL. REG. REACH ROD END
2	4NHP-6-08-PISTON
2	4NHP-6-09-PISTON ROD
2	4NHP-6-10-CROSSHEAD
2	4NHP-6-11-CROSSHEAD PIVOT PIN
4	4NHP-6-12-SLIDE VALVE ECCENTRIC STRAP
2	4NHP-6-13-SLIDE VALVE ECC. STRAP ROD TYPE-1
2	4NHP-6-14-SLIDE VALVE ECC. STRAP ROD TYPE-2
2	4NHP-6-15-CON-ROD
2	4NHP-6-16-CON-ROD BIG END BEARING
2	4NHP-6-17-CON-ROD BEARING STRAP
2	4NHP-6-18-SLIDE VALVE
2	4NHP-6-19-SLIDE VALVE HOLDER
2	4NHP-6-20-SLIDE VALVE SPINDLE PART-1
2	4NHP-6-21-SLIDE VALVE SPINDLE PART-2
2	4NHP-6-22-SLIDE VALVE SPINDLE YOKE
1	4NHP-6-23-WEIGH SHAFT
2	4NHP-6-24-LIFTING ARM
1	4NHP-6-25-RADIUS ROD
2	4NHP-6-26-LIFTING LINK
2	4NHP-6-27-EXPANSION LINK
2	4NHP-6-28-EXPANSION LINK SLIDE BLOCK
2	4NHP-6-29-LIFTING LINK PIVOT AXLE
1	4NHP-6-30-FWD-REV REACH ROD

QTY.	PART NUMBER
2	4NHP-7-01-CANOPY REAR SUPPORT
2	4NHP-7-02-CANOPY MIDDLE SUPPORT
1	4NHP-7-03-CANOPY FRONT SUPPORT
2	4NHP-7-04-CANOPY REAR CROSS BRACE
1	4NHP-7-05-CANOPY MIDDLE CROSS BRACE
1	4NHP-7-05-CANOPY MIDDLE CROSS BRACE
1	4NHP-7-06-CANOPY REAR ROOF RAFTER
1	4NHP-7-07-CANOPY MIDDLE ROOF RAFTER
1	4NHP-7-08-CANOPY FRONT ROOF RAFTER
2	4NHP-7-09-CANOPY INTERMEDIATE ROOF RAFTER
2	4NHP-7-10-CANOPY SIDE BEAM
5	4NHP-7-11-CANOPY ROOF PERLIN
2	4NHP-7-12-CANOPY SIDE BOARD
1	4NHP-7-13-CANOPY ROOF TOP
2	4NHP-7-14-FRONT CROSS BRACE
QTY.	PART NUMBER
1	4NHP-9-01-MECH OILER OIL CONTAINER
1	4NHP-9-02-MECH OILER OIL CONTAINER TOP COVER
1	4NHP-9-03-MECH OILER CRANKSHAFT BEARING
1	4NHP-9-04-MECH OILER CRANKSHAFT BEARING NUT
1	4NHP-9-05-MECH OILER PUMP PORT BLOCK
1	4NHP-9-06-MECH OILER DISCH VALVE BODY
1	4NHP-9-07-MECH OILER DISCH VALVE BOTTOM SCREW
1	4NHP-9-08-MECH OILER DISCH VALVE BALL VALVE
1	4NHP-9-09-MECH OILER DISCH VALVE SPRING
2	4NHP-9-10-MECH OILER M8x4 PIPE NUT
1	4NHP-9-11-MECH OILER CRANKSHAFT
1	4NHP-9-12-MECH